

CONGRATULATIONS!

You now own the finest pedal made. A Morley.

The VOL is designed for years of trouble free operation. To insure your satisfaction, please take a bit of time to read this book and acquaint yourself with some of the features that may be new to you. Above all, we hope you enjoy your new Morley VOL as much as we enjoyed building it for you.

GENERAL INFORMATION

The Morley VOL is A.C. powered and photo-electric cell driven. There is no rack and pinion gear nor is there a pot coupled to the pedal, as you might find in most other pedals. The indicator light is the driving source for the VOL and must be on for the unit to operate. Replace a damaged bulb using a factory replacement or a #387 lamp as a substitute. A #327 may also be used in an emergency.

OPERATING INSTRUCTIONS

1. Plug the VOL into the appropriate A.C. source.
2. Connect the instrument to the VOL by plugging one end of the shielded cable to the instrument and plug the other end into the input labeled "INSTRUMENT" on the volume pedal.
3. Connect the amp to the VOL by plugging one end of a shielded cord into the input of the amp, and the other end into the remaining VOL jack labeled "AMPLIFIER".
4. Set the controls on your instrument, and your amplifier, to their usual settings.

USING THE VOLUME PEDAL


1. In the up pedal position (toe up, heel down), there should be no sound. As the rocker pedal is pressed down, the sound level increases in relation to the angle of the pedal. The level increases as you press downward on the pedal.

VOLUME PEDAL INSTRUCTION MANUAL

MORLEY PEDALS ARE STATE OF THE ART PRODUCTS BUILT TO HIGHEST PROFESSIONAL STANDARDS OF QUALITY THEREFORE, FOR ONE YEAR FROM DATE OF PURCHASE, MORLEY WARRANTS IT'S PRODUCTS TO BE FREE FROM DEFECT, TO THE ORIGINAL CONSUMER PURCHASER, PROVIDED THAT:

1. THE PRODUCT HAS NOT BEEN DAMAGED, OR ABUSED.
2. THE PRODUCT HAS NOT BEEN ALTERED, OR REPAIRED BY THE CUSTOMER OR AN UN AUTHORIZED SERVICE CENTER.
3. THE SERIAL NUMBER HAS NOT BEEN ALTERED OR ERASED.
4. THE GUARANTEE CARD IS FILLED OUT, AND RETURNED TO US WITHIN 10 DAYS FROM DATE OF PURCHASE.
5. THE PURCHASER RETURNS THE PRODUCT TO US FREIGHT PREPAID IN THE EVENT THAT SERVICE IS REQUIRED.

ONCE THE ABOVE CONDITIONS ARE MET, MORLEY WILL REPAIR OR REPLACE THE PRODUCT, WITHOUT CHARGE TO THE PURCHASER FOR THE ONE YEAR GUARANTEE PERIOD.

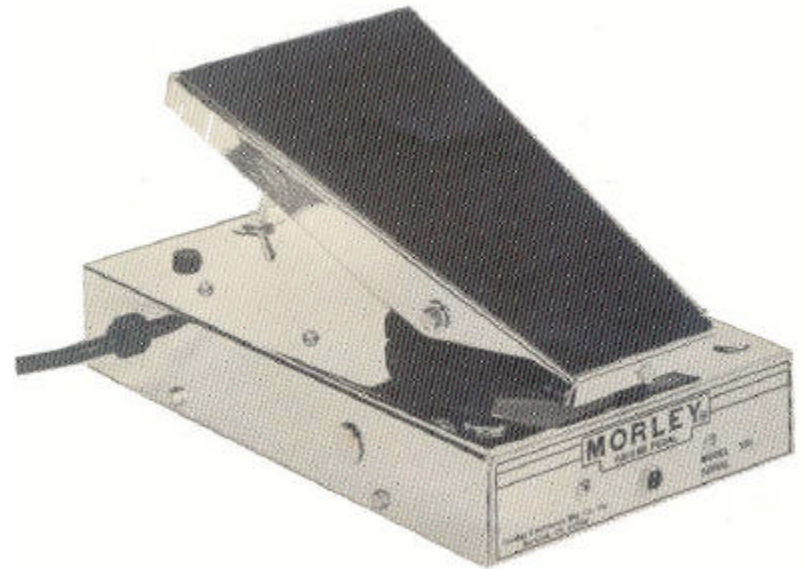

MORLEY®

A Division of Tel-Ray Electronics Mfg. Co., Inc.

VOL

MORLEY